




Instruction Manual

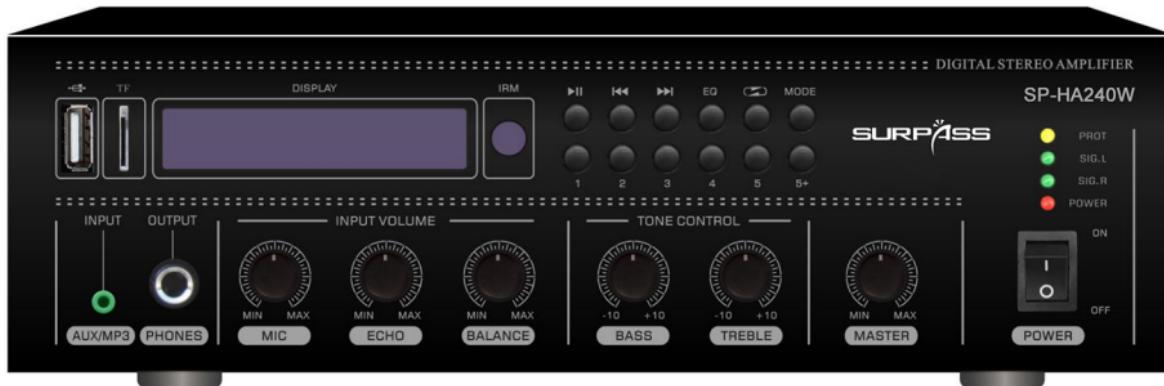

Digital Stereo Mixer Amplifier with Wi-Fi/Bluetooth/Mp3/USB/TF/FM/AUX IN

Specifications

Rated Power	2*40W at 8 ohm	
Sensitivity	AUX/USB	360mV
	WIFI	330mV
THD	<0.5%	
Frenquency Response	20Hz-20KHz under 1/8 RMS	
S/N	75dB	
AUX/REC Line out	420 mV	
Tone Control	Treble	±10dB
	Bass	±10dB
Dimension	260mm*235mm*80mm	
Net Weight	1.8 kg	



A triangle with an exclamation mark draws the use's attention to important instructions for use and maintenance in the accompanying manual.



A triangle with a lightning symbol draws the use's attention to "dangerous voltage" without insulation in the cabinet which may be high enough to entail a risk of electric shock.

Warnings:

- Do not expose the product to rain or moisture
- Do not place any flame (Lit candles, etc.) on or near this product
- Do not place the remote's battery within reach of children
- Please do not charge,dismantling,heated to 100 °C (212 °F) to the battery above or incineration.


Cautions:

- Do not open the system case unprofessionally to avoid any electric shock.
- Please remove the power cord from the socket before cleaning, an only dry cloth can be used for cleaning.
- Do not block any vents. Please follow these instructions for installation.
- Please cut off the power for avoiding product damage in thunderstorm weather or long time without use.


Main content

Specifications	1
Front Panel Description	3
Back Panel Description	4
Remote Control	5
Main Operations	6
WiFi Connection	7
WiFi Preset & Airplay	9
BT & FM Mode	10
USB/TF & AUX Mode	11
Troubleshootings & Package List	12

Front Panel

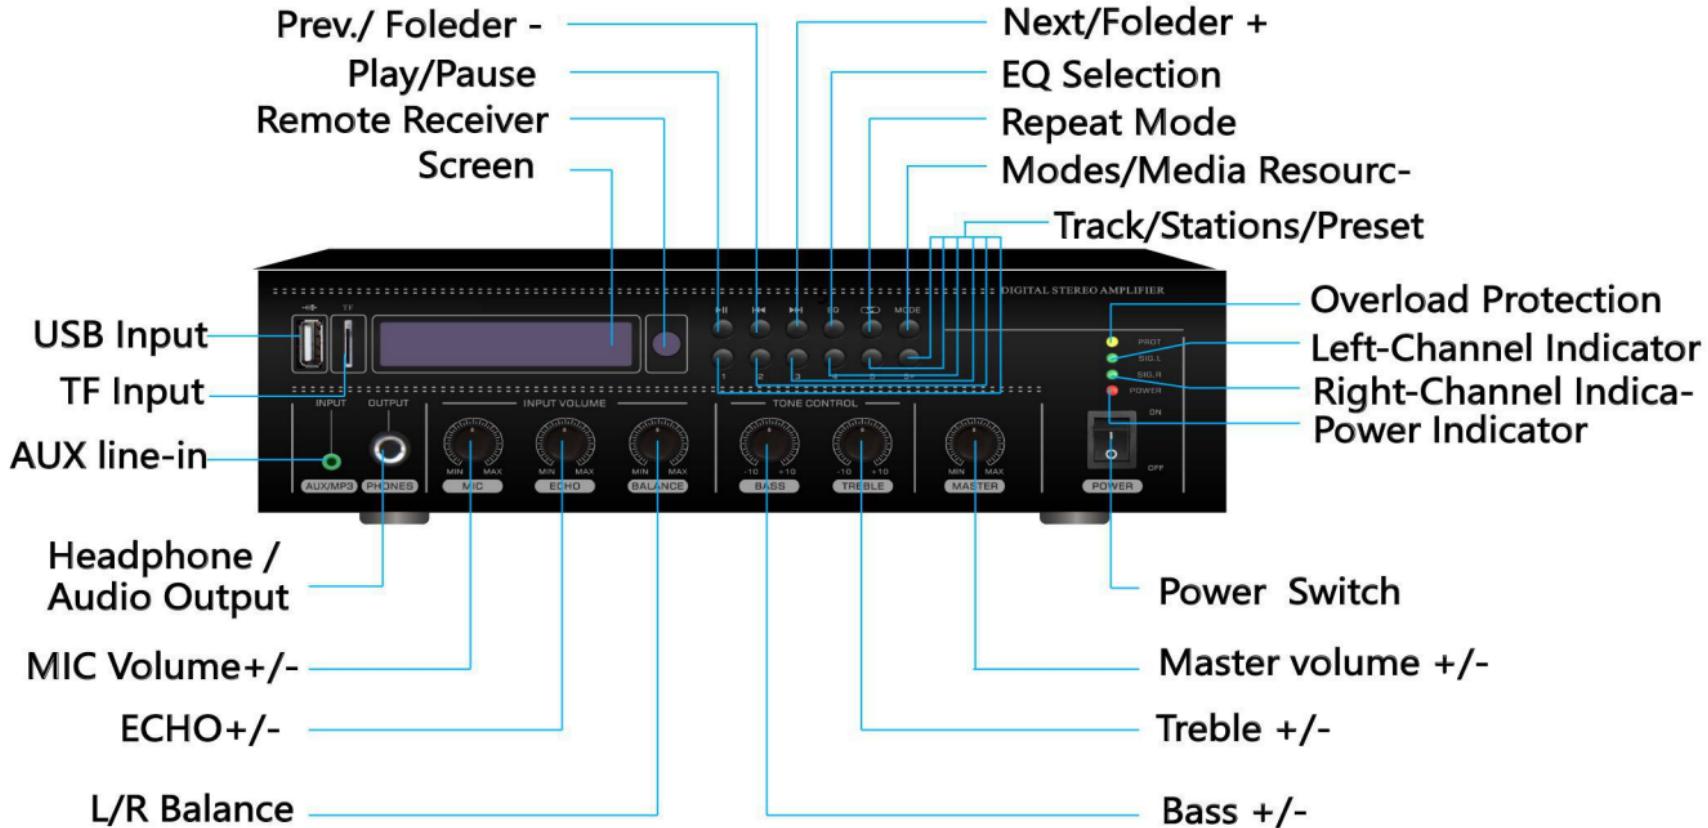


Back Panel

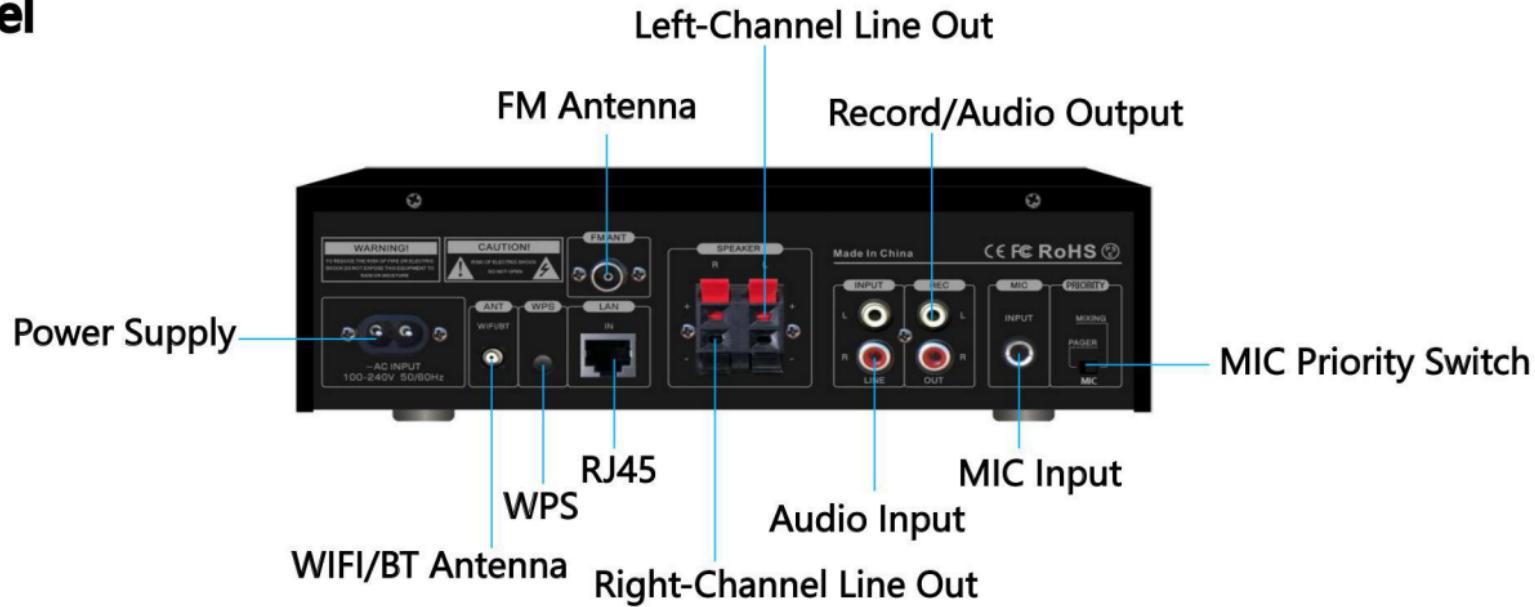

Note:

- **Speaker:** It can be connected with 4-16ohm Speaker, 6 or 8ohm speakers are suggested.
- **WPS:** Press WPS button to disconnect the current connecting WIFI device, the system will go to re-pair status. Hold WPS button for 6-8 seconds to clear all the history connected WiFi devices.
- **RJ45 port :** Through this port, you can connect the amplifier to internet directly via internet cables . In this way, you do not have to connect the amplifier wirelessly.
- **MIC Priority:** When switch to PAGER side, The microphone sound output is in priority while speaking with microphone, when switch to MIXING side, microphone and media output in a mixing way.

Remote Control



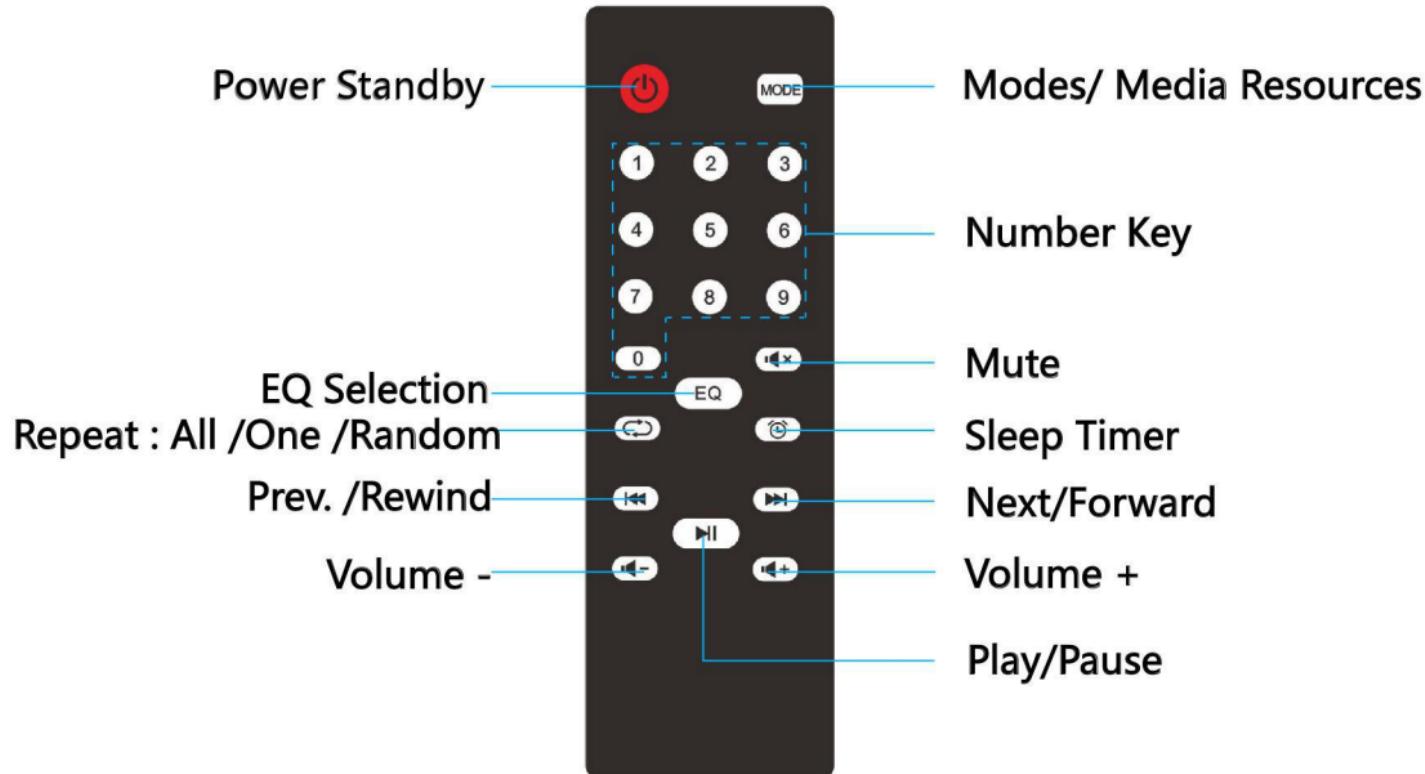


Two AAA batteries are requested for the new remote control

Main operations:

Function	Operation on Amplifier	Operation on Remote
Power On/Off	Plug the power cord, press POWER switch	No
Standby On/Off	No	Press POWER key
Mode Shift	Press MODE button to shift modes between WIFI/BT/USB/TF/FM/AUX.	Press MODE key
Volume	Rotate MASTR VOLUME knob	Press V+/V- key
Tone +/-	Rotate TREBLE/BASS knob	No
L/R Balance	Rotate BALANCE knob	No
MIC Volume	Rotate MIC knob	No
ECHO +/-	Rotate ECHO knob	No
Repeat Mode	Press REPEAT button to shift between All/One/Random	Press REPEAT key
EQ Selection	Press EQ button to shift between Pop/Country/Classic/Rock/Jazz/Normal	Press EQ key
Mute	No	Press MUTE key
Sleep Timer	No	Press SLEEP TIMER key to set auto-off between 30/60/90/120/150/180 minutes

WIFI Connection (Shift to WIFI mode, Install the MUZO App onto your phone)

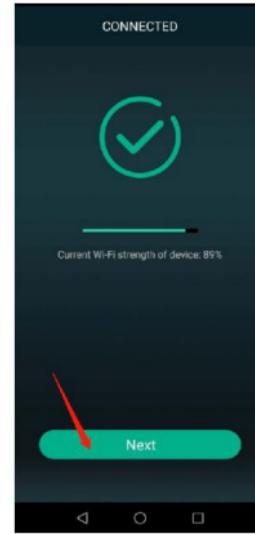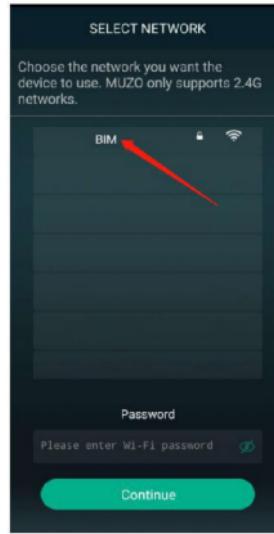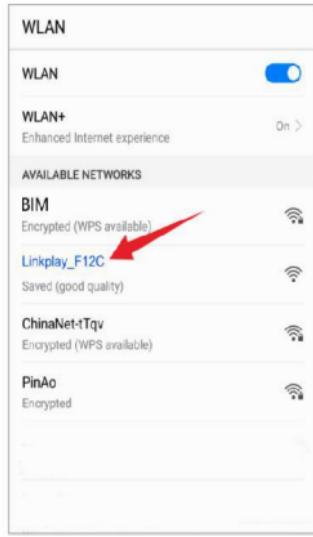


Step1:
Search amplifier's WiFi "Linkplay_xxxx" on your phone, and click it to connect the amplifier with your phone.

Step2:
Re-start the MUZO App and click "Add Device" to connect the amplifier to your wireless router.

Step3:
Select your located router and connect the amplifier to it. Here take [BIM] as an example of your router name.


Step4:
Click "Next" after the amplifier is connected with WiFi 'BIM' .

Step5:
Choose a connected amplifier to control.

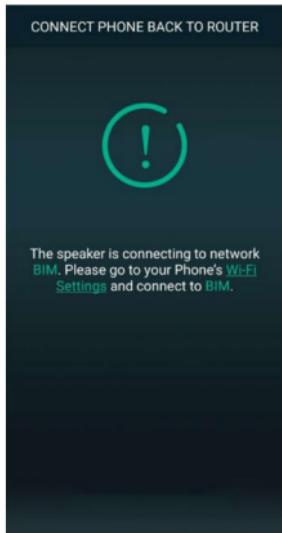


Step6:

This reminds you that your phone must be connected to the same router which the amplifier had connected to.

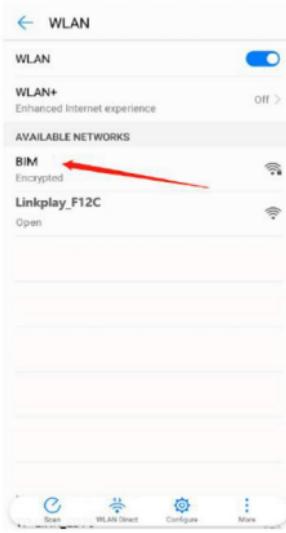


Step7:

Disconnect your phone from the amplifier and connect your phone to the router 'BIM'. You can only control the amplifier while your phone and the amplifier are both connected with a same router.

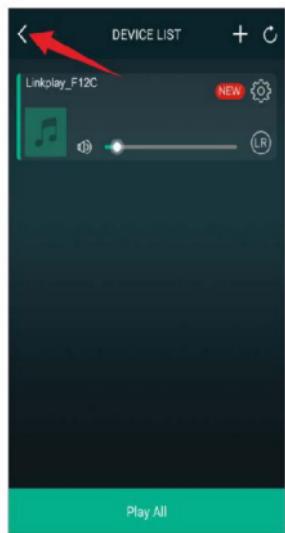

Step8:


Return to the MOZU App interface and start to control the amplifier wirelessly.

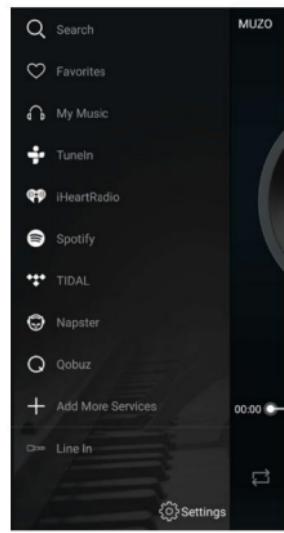

Step9:

For example, you can click and enter "TuneIn" to choose any of your favourite local radios. The 'Line in' on the bottom can not be selected.

WiFi Preset & Airplay

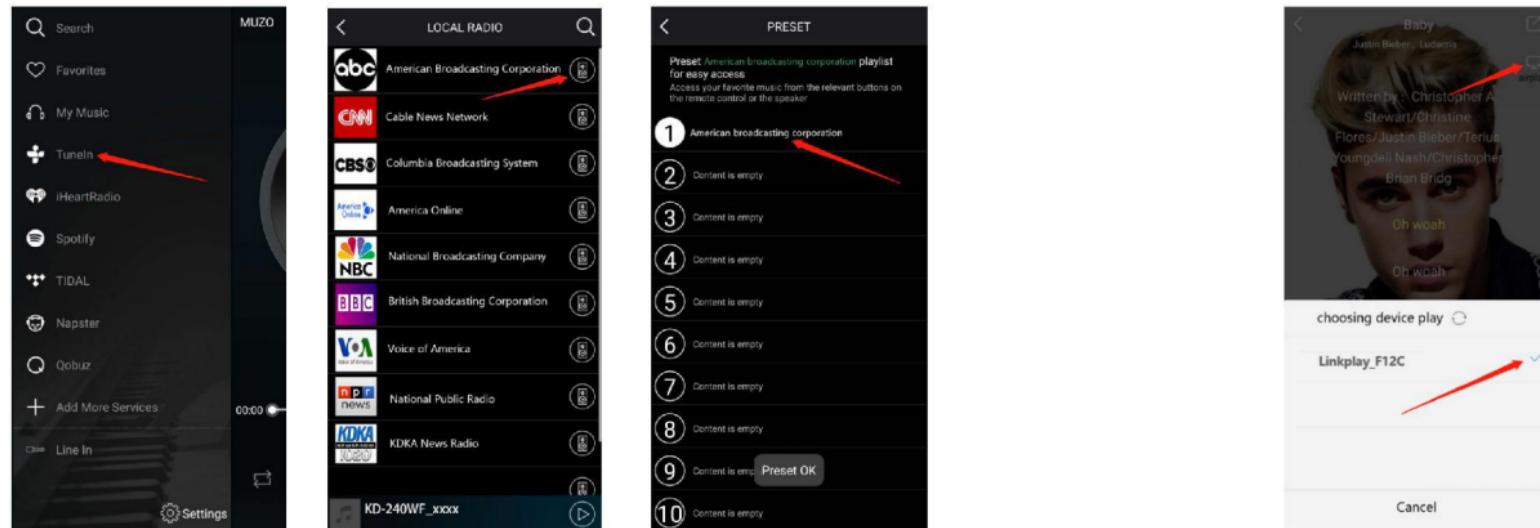

WiFi Preset:

Click the preset icon on the right side of a radio station to enter the preset interface, you can preset up to 10 favorite stations. Then you can use the number buttons/keys to enter the presetted stations directly.

Airplay:

After the amplifier being connected. You can also use other music app on your phone such as' Spotify/Apple Music' etc. to stream music to the amplifier by airplay.

BT Mode

Function	Operation on Amplifier	Operation on Remote
BT Connection	1. Shift to BT Mode; 2. Search and pair with name "BGM SYSTEM"	1. Shift to BT Mode; 2. Search and pair with name "BGM SYSTEM"
Play/Pause	Press PLAY/PAUSE button	Press PLAY/PAUSE key
Prev./Next	Press PREV./NEXT	Press PREV./NEXT

FM Mode

Function	Operation on Amplifier	Operation on remote
Auto-Search	Hold PLAY button to auto-search and save all stations first	Hold PLAY button to auto-search and save all stations first
Semi-Auto Shift	Hold PREV/NEXT button to auto shift to the PREV /NEXT station	Hold PREV/NEXT button to auto shift to the PREV /NEXT station
FM Preset	Hold a number button for 3s to save the current station	Hold a number key 3s to save the current station
Manual Frequency	No	Press number keys to reach any frequency. For example, Press 4 numbers 1 0 1 3, it will directly shift to station 101.3

USB/TF

Function	Operation on Amplifier	Operation on Remote
Play/Pause	Press PLAY/PAUSE button	Press PLAY/PAUSE key
Prev./Next	Press PREV./NEXT	Press PREV./NEXT
Rewind/Forward	No	Press and hold PREV./NEXT
Foleder+/-	Hold PREV./NEXT for foleder-/+	No
Select a song	Press NUMBER button to select	Press NUMBER key to select
Repeat Mode	Press REPEAT button to shift between All/ One/Random	Press REPEAT key to shift between All/ One/Random

AUX

Function	Operation on Amplifier	Operation on Remote
Connection	Connect any external media resources to the amplifier via audio cord. And shift the amplifier to AUX mode.	

Troubleshoots

- Volume is too low.

Please notice that there are volume adjustment on both the amplifier and remote. check if you has adjusted one to be very low.

- The sound is intermittent.

This amplifier has an overload protection function when it is overloaded, the yellow protection indicator is on and the amplifier cuts off audio output. This mostly happens when you are connecting with 4ohm speakers. Please turn down the volume when overload.

- Left and Right channel sound is unbalance or one side is mute.

Please make sure that the L/R balance is adjusted in the middle position.

- For any other questions/ issues that we did not mention in this manual.

Please contact with the local agent.

Package



Main Unit



Remote



Power Cord



Audio Cord



1/4 " Male
to 1/8" Female
headphone convertor



WIFI/BT antenna



FM antenna



Instruction Manual

Thanks for purchasing the amplifier